

Mate3 Instructions for switching between Grid & Generator Charging.



GRID CHARGE

1. Push: **Lock**
2. Input #: **(email for your number)**
3. Main Menu: **Settings**
4. Setting Menu: **Inverter**
5. Inverter Menu: **AC Input and Current Limit**
 - a. Input Type: **GRID**
 - b. Grid Input AC Limit: **5.0 A**
 - c. Gen Input AC Limit: **40 A**
 - d. Charge AC Limit: **11.0 A**(STEPS A – D must be made on PORT 1 and PORT 2)

GENERATOR CHARGE

1. Push: **Lock**
2. Input #: **(email for your number)**
3. Main Menu: **Settings**
4. Setting Menu: **Inverter**
5. Inverter Menu: **AC Input and Current Limit**
 - a. Input Type: **GEN**
 - b. Grid Input AC Limit: **5.0 A**
 - c. Gen Input AC Limit: **40 A**
 - d. Charge AC Limit: **20.0 A**(STEPS A – D must be made on PORT 1 and PORT 2)